

LC3S0002DK-01  
LC3P0004DK-01  
LC3P0005DK-01  
LC3P0006DK-01

# LC3 Column Kit User Manual



This kit user manual does not replace the user manuals of the included products

## 1. Get your Plug & Play LC3 lifting column kit

You will receive the following parts:

- 1-4 [LC3 lifting column\(s\)](#)
- Black end plates
- Control box(es) [CO71](#) and blind plugs
- Junction box(es) [MJB5](#) and blind plugs
- Operating panel [TP1](#)
- Motor and mains cable



## 2. Mounting the column(s) and accessories

### Column(s)

- The lifting column can be mounted in both directions. Both IPX4 and IPX6 protections are obtained when mounting the largest profile upwards. When mounting the largest profile downwards, IPX4 is obtained.
- The optional end plates offer easy mounting of the column(s) to e.g. worktops and directly on the floor. Start by mounting the bottom plate with the 4 x 45 mm M10 screws and repeat this process for the top plate with the 4 x 35 mm screws. Lastly, mount the column(s) in the application by using the 4 x M10 holes located in the top and bottom plates.



 
If mounting more than one column: Fixate all columns to the worktop. If the application needs to be fixated to a firm foundation/base, only fixate one column to the foundation/base to prevent the columns from bending if they do not move in perfect parallel.

### Control box and operating panel

- It is recommended that the control box CO71 is mounted in a position that allows water to escape. Mount the control box using the bracket with M4 nuts (see picture below). Open the lid of the box with a slotted screw driver to mount the cables.
- Mount the operating panel on a surface using the panel mounting bracket (see picture below).


#### Control box mounting bracket

The bracket has 3 x M4 holes for mounting of the control box



#### Panel mounting bracket

The operating panel TP1 is mounted with a 45° bracket

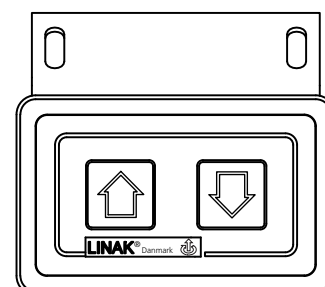


### 3. Connect the column kit

Depending on how many columns there are in the kit, follow the corresponding guide on the following pages.

#### Single and 2-Parallel kits


1. Connect the first lifting column using the angled motor cable ①. Remember to install the locking ring on the female mini-fit connector to keep the cables fastened. Then connect to the control box ②; channel 2
  - 1.1. If 2 columns: Connect the 2<sup>nd</sup> column to channel 4 in the control box ②.
2. Connect the control box ② from the center socket to the junction box ③, port 1. Use the straight cable with modular plugs.
3. Connect the operating panel ④ to the junction box ③, port 4.
4. Mount the blind plugs on the open ports of the junction box ③ and inside the control box ②. Close the lid tightly on the control box ② and close the junction box ③ by sliding the cable lock into place.
5. Check that the voltage stated on the label on the control box ② corresponds to the mains power. Plug in the mains cable ⑤ and switch on the power.
6. Press and hold both arrows on the operating panel ④ until the column(s) is/are fully retracted and stops running. The system is ready.

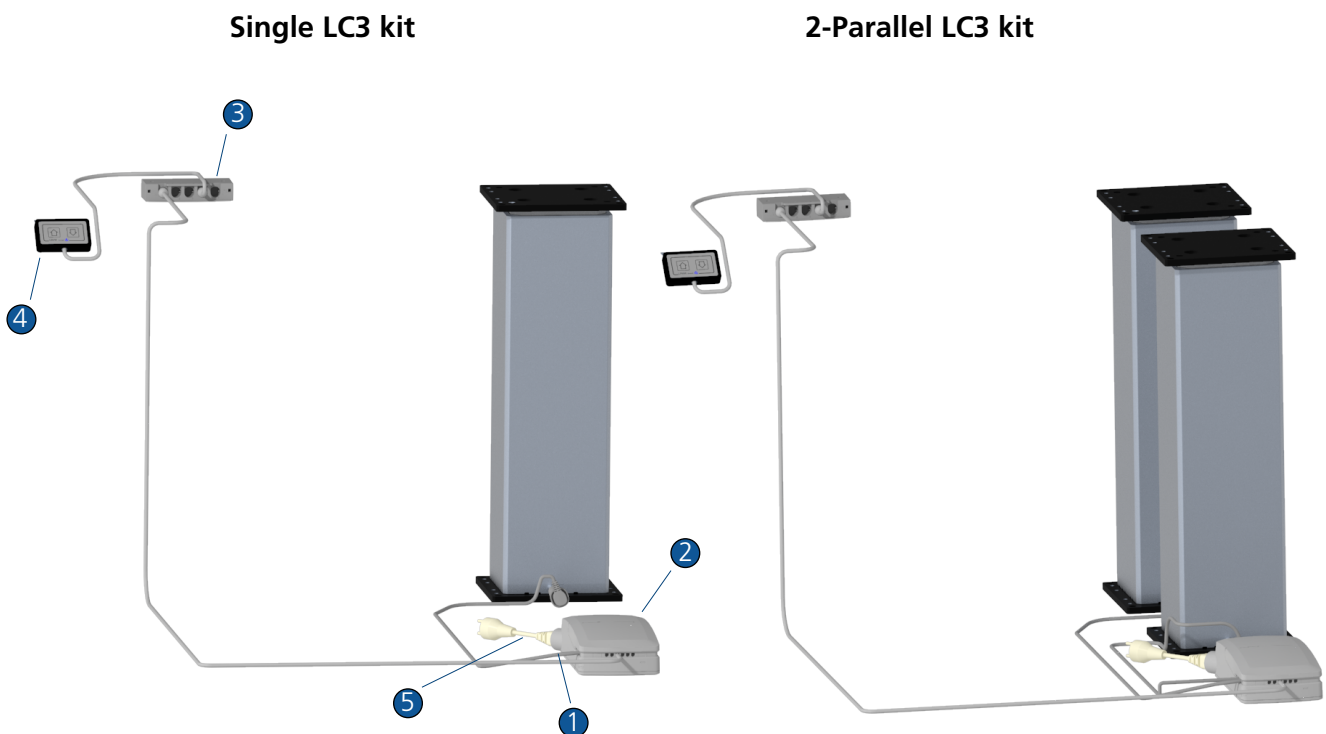


### 3- and 4-Parallel kits

1. Connect the first lifting column using the angled motor cable ①. Remember to install the locking ring on the female mini-fit connector to keep the cables fastened. Then connect to the control box ②; channel 2.
  - Connect the 2<sup>nd</sup> column to channel 4 in the same control box
  - Connect the 3<sup>rd</sup> column to channel 2 in control box 2
  - Connect the 4<sup>th</sup> column to channel 4 in control box 2
2. Connect the two control boxes ② from the center sockets to the junction box ③ MJB5094001-1323, port 1-2. Use the straight signal cables.
3. Connect the operating panel ④ to the junction box ③; port 5. Port 5 is only used for the initialisation process (not shown in the picture below).
4. Check that the voltage stated on the label on the control box ② corresponds to the mains power. Plug in the mains cable ⑤ and switch on the power.
5. Press and hold both arrow buttons on the operating panel ④ until the column(s) is/are fully retracted and stops running. Switch the plug of the operating panel cable from port 5 to port 4.
6. Mount the blind plugs on the open ports of the junction box and inside the control box. Close the lid tightly on the control box and close the junction box by sliding the cable lock into place. The system is ready.

3-Parallel LC3 kit

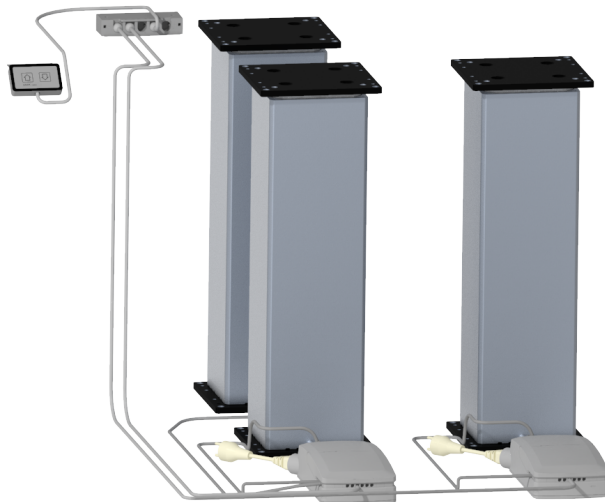

4-Parallel LC3 kit

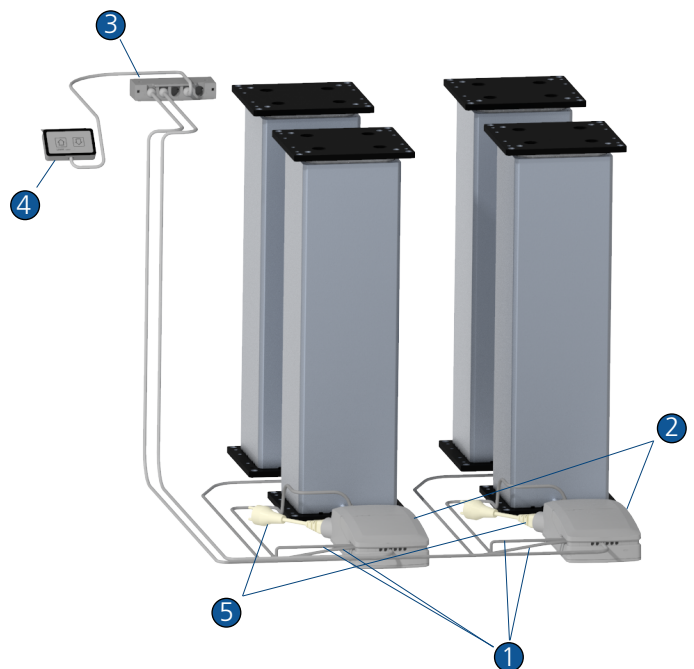

# Contacts

## FACTORIES

Denmark - Headquarters  
LINAK A/S  
Phone: +45 73 15 15 15  
Fax: +45 74 45 80 48  
Fax (Sales): +45 73 15 16 13  
Web: www.linak.com

China  
LINAK (Shenzhen) Actuator Systems, Ltd.  
Phone: +86 755 8610 6656  
Phone: +86 755 8610 6990  
Web: www.linak.cn

Slovakia  
LINAK Slovakia s.r.o.  
Phone: +421 51 7563 444  
Web: www.linak.sk

Thailand  
LINAK APAC Ltd.  
Phone: +66 33 265 400  
Web: www.linak.com

USA  
LINAK U.S. Inc.  
Americas Headquarters  
Phone: +1 502 253 5595  
Fax: +1 502 253 5596  
Web: www.linak-us.com  
www.linak-latinamerica.com

## SUBSIDIARIES

Australia  
LINAK Australia Pty. Ltd  
Phone: +61 3 8796 9777  
Fax: +61 3 8796 9778  
E-mail: sales@linak.com.au  
Web: www.linak.com.au

Austria  
LINAK Zweigniederlassung - Österreich (Wien)  
Phone: +43 (1) 890 7446  
Fax: +43 (1) 890 744615  
E-mail: info@linak.de  
Web: www.linak.at - www.linak.hu

Belgium  
LINAK Actuator-Systems NV/SA  
(Belgium & Luxembourg)  
Phone: +32 (0)9 230 01 09  
E-mail: beinfo@linak.be  
Web: www.linak.be - www.fr.linak.be

Brazil  
LINAK Do Brasil Comércio De Atuadores Ltda.  
Phone: +55 (11) 2832 7070  
Fax: +55 (11) 2832 7060  
E-mail: info@linak.com.br  
Web: www.linak.com.br

Canada  
LINAK Canada Inc.  
Phone: +1 502 253 5595  
Fax: +1 416 255 7720  
E-mail: info@linak.ca  
Web: www.linak-us.com

Czech Republic  
LINAK C&S s.r.o.  
Phone: +42 058 174 1814  
Fax: +42 058 170 2452  
E-mail: info@linak.cz  
Web: www.linak.cz - www.linak.sk

Denmark - International  
LINAK International  
Phone: +45 73 15 15 15  
E-mail: info@linak.com  
Web: www.linak.com

Denmark - Sales  
LINAK Danmark A/S  
Phone: +45 86 80 36 11  
Fax: +45 86 82 90 51  
E-mail: linak@linak-silkeborg.dk  
Web: www.linak.dk

Finland  
LINAK OY  
Phone: +358 10 841 8700  
E-mail: linak@linak.fi  
Web: www.linak.fi

France  
LINAK France E.U.R.L.  
Phone: +33 (0) 2 41 36 34 34  
Fax: +33 (0) 2 41 36 35 00  
E-mail: linak@linak.fr  
Web: www.linak.fr

Germany  
LINAK GmbH  
Phone: +49 6043 9655 0  
Fax: +49 6043 9655 60  
E-mail: info@linak.de  
Web: www.linak.de

India  
LINAK A/S India Liaison Office  
Phone: +91 120 4531797  
Fax: +91 120 4786428  
E-mail: info@linak.in  
Web: www.linak.in

Ireland  
LINAK UK Limited (Ireland)  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
+44 (0)796 855 1606 (UK Mobile)  
+35 387 634 6554 (Rep.of Ireland Mobile)  
E-mail: sales@linak.co.uk  
Web: www.linak.co.uk

Italy  
LINAK ITALIA S.r.l.  
Phone: +39 02 48 46 33 66  
Fax: +39 02 48 46 82 52  
E-mail: info@linak.it  
Web: www.linak.it

Japan  
LINAK K.K.  
Phone: 81-45-533-0802  
Fax: 81-45-533-0803  
E-mail: linak@linak.jp  
Web: www.linak.jp

Malaysia  
LINAK Actuators Sdn. Bhd.  
Phone: +60 4 210 6500  
Fax: +60 4 226 8901  
E-mail: info@linak-asia.com  
Web: www.linak.my

Netherlands  
LINAK Actuator-Systems B.V.  
Phone: +31 76 5 42 44 40 /  
+31 76 200 11 10  
E-mail: info@linak.nl  
Web: www.linak.nl

New Zealand  
LINAK New Zealand Ltd  
Phone: +64 9580 2071  
Fax: +64 9580 2072  
E-mail: nzsales@linak.com.au  
Web: www.linak.com.au

Norway  
LINAK Norge AS  
Phone: +47 32 82 90 90  
E-mail: info@linak.no  
Web: www.linak.no

Poland  
LINAK Polska  
LINAK Danmark A/S (Spółka Akcyjna)  
Phone: +48 22 295 09 70 /  
+48 22 295 09 71  
E-mail: info@linak.pl  
Web: www.linak.pl

Republic of Korea  
LINAK Korea Ltd.  
Phone: +82 2 6231 1515  
Fax: +82 2 6231 1516  
E-mail: info@linak.kr  
Web: www.linak.kr

Slovakia  
LINAK Slovakia S.R.O.  
Phone: +421 51 7563 444  
Web: www.linak.sk

Spain  
LINAK Actuadores, S.L.U.  
Phone: +34 93 588 27 77  
Fax: +34 93 588 27 85  
E-mail: esma@linak.es  
Web: www.linak.es

Sweden  
LINAK Scandinavia AB  
Phone: +46 8 732 20 00  
Fax: +46 8 732 20 50  
E-mail: info@linak.se  
Web: www.linak.se

Switzerland  
LINAK AG  
Phone: +41 43 388 31 88  
Fax: +41 43 388 31 87  
E-mail: info@linak.ch  
Web: www.linak.ch - www.fr.linak.ch  
www.it.linak.ch

Taiwan  
LINAK (Shenzhen) Actuator systems Ltd.  
Taiwan Representative office  
Phone: +886 2 272 90068  
Fax: +886 2 272 90096  
E-mail: sales@linak.com.tw  
Web: www.linak.com.tw

Turkey  
LINAK İth. İhr. San. ve Tic. A.Ş.  
Phone: +90 312 4726338  
Fax: +90 312 4726635  
E-mail: info@linak.com.tr  
Web: www.linak.com.tr

United Kingdom  
LINAK UK Limited  
Phone: +44 (0)121 544 2211  
Fax: +44 (0)121 544 2552  
E-mail: sales@linak.co.uk  
Web: www.linak.co.uk

## DISTRIBUTORS

Argentina  
Novotec Argentina SRL  
Phone: 011-4303-8989 / 8900  
Fax: 011-4032-0184  
E-mail: info@novotecargentina.com  
Web: www.novotecargentina.com

Colombia  
MEM Ltda  
Phone: +[57] (1) 334-7666  
Fax: +[57] (1) 282-1684  
E-mail: servicioalcliente@memltda.com.co  
Web: www.mem.net.co

India  
Mechatronics Control Equipments India Pvt Ltd  
Phone: +91-44-28558484, 85  
E-mail: bala@mechatronicscontrol.com  
Web: www.mechatronicscontrol.com

Indonesia  
PT. Himalaya Everest Jaya  
Phone: +6 221 544 8956 /+6 221 544 8965  
Fax: +6 221 619 1925  
Fax (Sales): +6 221 619 4658  
E-mail: hejplastic-div@centrin.net.id  
Web: www.hej.co.id

Israel  
NetivTech LTD  
Phone: +972 55-2266-535  
Fax: +972 2-9900-560  
Email: info@NetivTech.com  
Web: www.netivtech.com

Singapore  
Servo Dynamics Pte Ltd  
Phone: +65 6844 0288  
Fax: +65 6844 0070  
E-mail: servodynamics@servo.com.sg

South Africa  
Industrial Specialised Applications CC  
Phone: +27 011 466 0346  
E-mail: gartht@isagroup.co.za  
Web: www.isaza.co.za

United Arab Emirates  
Mechatronics  
Phone: +971 4 267 4311  
Fax: +971 4 267 4312  
E-mail: mechtron@emirates.net.ae

## Terms of use

LINAK® takes great care in providing accurate and up-to-date information on its products. However, the user is responsible for determining the suitability of LINAK products for a specific application. Due to continual development, LINAK products are subject to frequent modifications and changes. LINAK reserves the rights to conduct modifications, updates, and changes without any prior notice. For the same reason, LINAK cannot guarantee the correctness and actual status of imprinted information on its products.

LINAK uses its best efforts to fulfil orders. However, for the reasons mentioned above, LINAK cannot guarantee availability of any particular product at any given time. LINAK reserves the right to discontinue the sale of any product displayed on its website or listed in its catalogues or in other written material created and produced by LINAK, LINAK subsidiaries, or LINAK affiliates. All sales are subject to the 'Standard Terms of Sale and Delivery for LINAK A/S' available on LINAK websites. LINAK and the LINAK logotype are registered trademarks of LINAK A/S. All rights reserved.



WE IMPROVE YOUR LIFE